

Preparation

- 1 Check that the size, shape and colour of the panels match your order.
- 2 Before installation, lay the panels on the floor in the final arrangement to check layout, shade and fabric direction.

NOTE

Depending on orientation, slight colour differences may occur. For a uniform look, pay attention to fibre direction.

Required tools



Spirit level




Tape measure



Pencil


Step-by-step installation

1

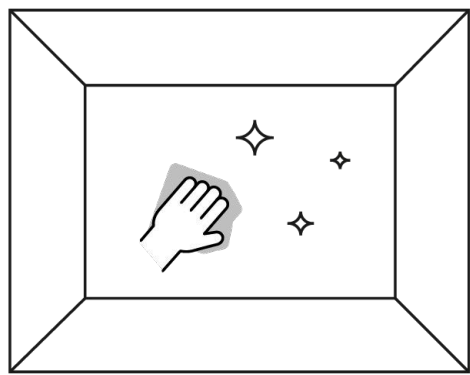


Clean the wall (dust, grease). The surface should be clean, dry and grease-free.

2

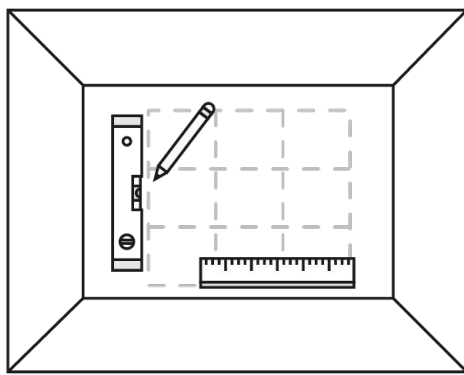


Mark the installation points using the level, tape measure and pencil.

3

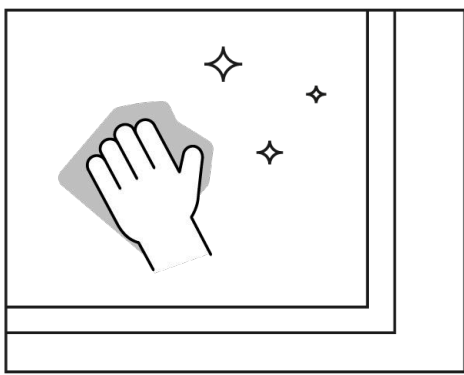

Wipe the back of the panel with a slightly damp cloth.


4a

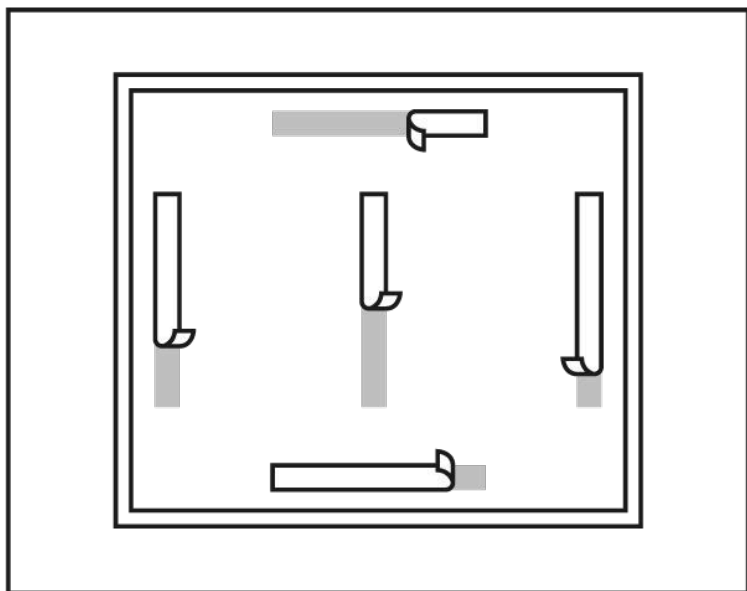

VELCRO MOUNTING

- a Attach strips evenly to the back (edges and centre) and the matching part to the wall.
- b Remove the protective film.


4b

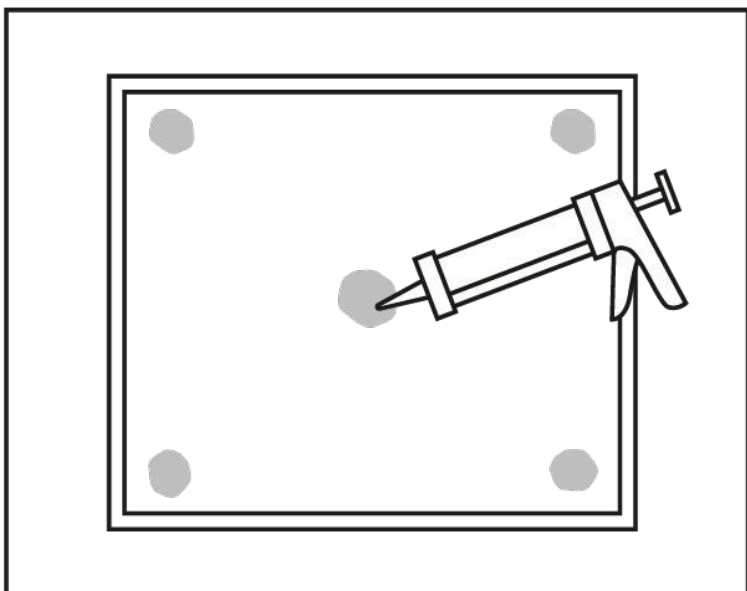

GLUE MOUNTING


- a Apply glue to the centre and corners.
- b Press the panel to spread the glue.
- c Follow the manufacturer's instructions (curing time, temperature).

5

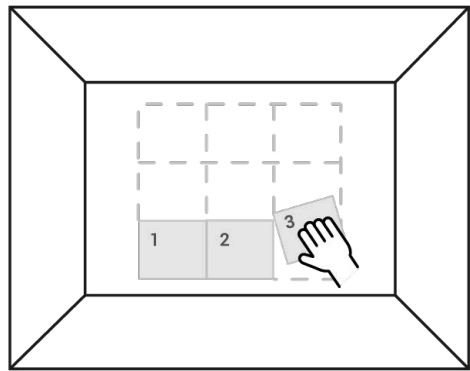


Place the panel in the marked position and press firmly.

6

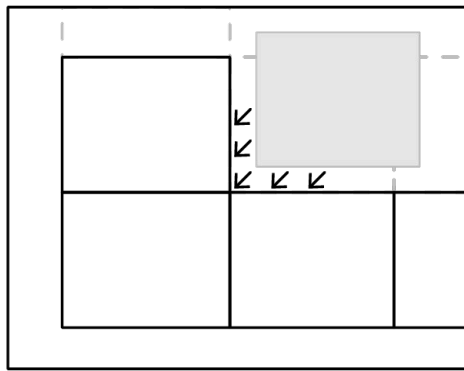

Repeat with the remaining panels, fitting them closely together.

7

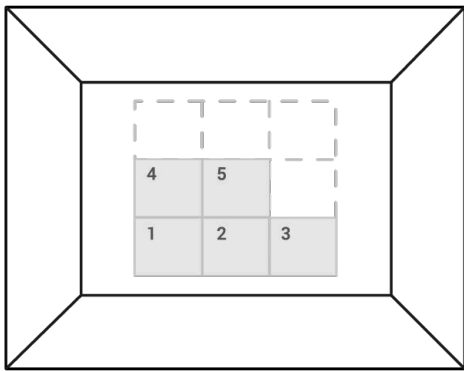

For several rows, start from the bottom and work upwards.